


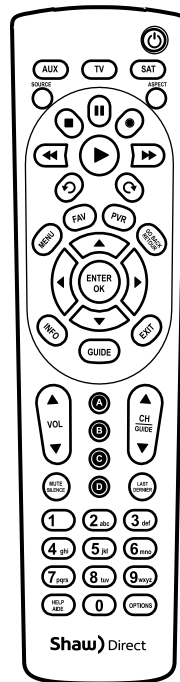

SHAW DIRECT IRC600/
URC600 Remote Control
Télécommande IRC600/
URC600 SHAW DIRECT



kind of interference, you must "pair" each remote control with each receiver by assigning a new "address" to each combination.

- 1. Press the SAT button to select the remote control's SAT mode.
2. Press the OPTIONS button to display the Options screen on your TV.
3. On the Options Menu use the arrow buttons and press ENTER/OK to open the following menus.

6 System Setup (select models only)
4 System Settings
3 Installation Settings

2 Remote Control Address.
4. Once you are on the "Remote Control Address screen" program the remote control using the remote control keypad programming sequence.

5. Press and hold the remote controls SAT mode key until the red lights flash at least twice and release the SAT key.
6. Enter a new 3 Digit SAT address from the below list using the number keys the remote control.

Table with 2 columns: SAT ADDRESS and CODE. Rows include ADDRESS 0-7 with corresponding codes 000-007.

7. Press ENTER/OK to save the new address and pair the remote with your satellite receiver.
8. Press EXIT to leave the Options menu.

OVERVIEW

The Shaw Direct IRC600 IR and URC600 IR/RF Remote Controls by Universal Electronics are our latest generation universal remote controls.

The remote control requires installing two (2) new AA batteries (included) and simple programming instructions to control your TV.

INSTALLING BATTERIES

- 1. Pull back the remote control's battery cover and remove it.
2. Insert the two (2) supplied AA batteries according to the + and - marks in the battery case.
3. Push the battery cover back into place.
4. Test the unit by pressing the power key.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries with new AA batteries.

PROGRAMMING SAT CONTROL

Your remote control address is set at the factory to 000 to control all of the functions on your Motorola satellite receiver.

PROGRAMMING DEVICE CONTROL

The Shaw Direct IRC600 and URC600 Remote Controls are preprogrammed to operate a Motorola satellite receiver, a Sony TV, and Sony DVD player.

- 1. Turn on the TV or Auxiliary device.

NOTE: Please read steps 2 to 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

- 2. Press and hold Device key (TV or AUX) until the Red Lights flash at least twice, then release TV or AUX.
3. Locate the code for your device in Manufacturer's Codes on the back of this user guide. Brands are listed in alphabetical order with the most popular codes listed first.
4. Enter the first five-digit code for your TV or Auxiliary Device. If you perform this procedure correctly, the Red Light will blink twice.

NOTE: If you enter an invalid code, the red light will not blink when entering the last digit and exit the programming mode. Repeat steps 2 to 4 with a valid code.

- 5. Aim the remote control at your TV or Auxiliary Device and press Power once. The device should turn off. If it does not respond, repeat steps 2 to 4, trying each code listed for your brand until you find one that works.
6. The TV or Auxiliary Device code will be stored in the remote control and will be automatically reprogrammed when the batteries are changed.

TV Code: [] [] [] [] []
AUX Code: [] [] [] [] []

PROGRAMMING CHANNEL CONTROL LOCK

By default, the remote control's channel-control capabilities are locked to the satellite receiver. The affected keys are 0 through 9, CH+, CH- and LAST. This guarantees that you do not inadvertently change a channel on your TV.

Unlocking Channel Control

- 1. On the remote control, press and hold SAT until it blinks twice.
2. Enter 9-7-3. The SAT key blinks twice.
3. Press CH - once. The SAT key blinks four times.

Locking Channel Control to SAT

- 1. On the remote control, press and hold SAT until it blinks twice.
2. Enter 9-7-3. The SAT key blinks twice.
3. Press CH+ one. The SAT key blinks twice.

SEARCHING FOR YOUR CODE

If your brand of Device does not respond to the remote control after trying all of the codes listed, or if your brand is not listed at all, try searching for your code.

1=TV, 2=DVD/VCR, 3=AUDIO

- 1. Turn on your Device.
2. Press and hold Device key (TV or AUX) until the Red Lights flash at least twice, then release TV or AUX.
3. Enter in 9 - 9 - 1. The Red Light will blink twice.
4. Press Digit 1 to search for a TV, Press Digit 2 to search for a DVD/VCR or Press Digit 3 to search for an Audio device.
5. While pointing the remote control at the Device, press and release the CH + key until the Device turns off.

PROGRAMMING THE MASTER POWER KEY

NOTE: In the search mode, the remote control will send IR codes from its library to the target device.
6. Press Device key (TV or AUX) once to lock in the code. The Red Light will blink twice.

CHECKING THE CODES

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which five-digit code is operating your TV. Perform the following steps after setting up your TV to find out which five-digit code operates your TV.

- 1. Press and hold TV until the Red Light flashes at least twice, then release TV.
2. Enter in 9 - 9 - 0. The Red Light will blink twice.
3. To view the code for the first digit, press 1 once. Wait 3 seconds and count the number of times the Red Light blinks (e.g., 3 blinks =3) and write down the number in the left most TV Code box (at end of this section).

NOTE: If a code digit is "0", the red light will not blink.

- 4. Repeat step 3 four more times for the remaining digits. Use 2 for the second digit, 3 for the third digit, 4 for the fourth digit and 5 for the fifth digit. Finish writing down the code in the TV Code boxes (at end of this section).
5. To check AUX code, repeat steps 1 through 4 using the AUX key in step 1.
6. To check SAT code, repeat steps 1 through 4 using the SAT key in step 1.

Note: When verifying the SAT Address only digits 1, 2 and 3 are required.

TV Code: [] [] [] [] []

AUX Code: [] [] [] [] []

CHANGING VOLUME CONTROL

On the Shaw Direct IRC600 and URC600 Remote Controls, Global Volume Lock is set to TV, so you can control TV volume while in the AUX, or SAT mode.

You can perform Individual Volume Unlock on a selected device to set its volume control for independent operation.

Locking Volume to a Specific Mode.

- 1. Press and hold SAT until the Red Lights blink at least twice, then release SAT.
2. Enter in 9 - 9 - 3 (The Red Light will blink twice after the 3).
3. Press and release the Mode Key (TV or AUX) to lock Volume to.

Unlocking Volume from a Specific Mode.

- 1. Press and hold mode key to be unlocked (e.g. AUX) until the Red Lights blinks at least twice, then release the mode.
2. Enter in 9 - 9 - 3 (The Red Light will blink twice after the 3).
3. Press and release the Volume Down Key the Red light will flash 4 times.

USING THE MASTER POWER KEY

The Shaw Direct IRC600 and URC600 Remote Controls have a unique feature that allows you to sequentially turn up to three of your home entertainment devices on or off with a single key press.

NOTE: The MASTER POWER (Power) default setting is the SAT mode. If it is not programmed, only the Satellite receiver and TV will turn on or off. In the AUX or TV mode, pressing the Power key will only turn on or off the selected device.

PROGRAMMING THE MASTER POWER KEY

- 1. Press and hold SAT until the Red Light blinks at least twice, then release SAT.
2. Enter in 9 - 9 - 5 The Red Light will blink twice.
3. Press and release each mode key once in the order that you want them in the Master Power sequence.
4. Press and release the Power key (The red light under SAT will flash twice).

USING THE MASTER POWER KEY

After Programming, point the remote control at your devices and press and hold the POWER key for 1.5 seconds

Removing the Master Power Key

- 1. Press and hold SAT until the Red Light blinks twice, then release SAT.
2. Enter in 9 - 9 - 5 The Red Light will blink twice.
3. Press and release the Power key (The red light under SAT will flash twice).

TROUBLESHOOTING

PROBLEM: Device key does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AA alkaline batteries

PROBLEM: Device key blinks when you press a key, but home entertainment device does not respond.

SOLUTION: Be sure you are aiming the remote control at your home entertainment device and that you are within 15 feet of the device you are trying to control.

PROBLEM: The remote control does not control home entertainment devices or commands are not performing properly.

SOLUTION: Try all listed codes for the device brand being set up. Make sure all devices can be operated with an infrared remote control.

ADDITIONAL INFORMATION

This product does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your Shaw Direct IRC600 and URC600 Remote Controls.

For help via the Internet, visit us at:

www.shawdirect.ca

Copyright© 2010 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without prior written permission of Universal Electronics Inc.

COMPLIANCE WITH FCC RULES AND REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged or try to correct the interference by one or more of the following measures:

- Increase or decrease the separation between the equipment and receiver.
• Consult the dealer or an experienced remote control/ TV technician for help.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

INDUSTRY CANADA INFORMATION

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

MANUFACTURER'S CODES

SETUP CODES FOR AUDIO

CODES DE RÉGLAGE POUR CHAÎNES STÉRÉO

Table with columns for Manufacturer and Code. Includes Alwa, Akai, Aico, Apple, B & W, Denon, HTI, Vizio, Yamaha, ZVOX, Zenith, Accurian, Action, Admiral, Advent, Alka, Alco.

Table with columns for Manufacturer and Code. Includes Altec Lansing, AMC, Amphion Media, AMW, Anam, Anthem, Apex Digital, Arcam, Audiotronic, Audiovox, B & K, Bose, Boston Acoustics, Cambridge Sound, Carver, Cary Audio Design, Coby, Curtis, Daewoo, Denon, Elan, Fisher, Flextronics, Gateway, Halcro, Harman/Kardon, Hitachi, iHome, iLive, Insignia, Integra, iSymphony, JBL, JVC, Kenwood, KLH, Koss, Krell, Left Coast, Levicon, LG, Linn, Liquid Video, Marantz, Magnavox, Mark Levinson, McIntosh, Micromega, Mitsubishi, Myrad, Nakamichi, NexTech, Norcent, Onkyo, Optimus, Ontron, Panasonic, Parasound, Philco, Philips, Pioneer, Polaroid, Polk Audio, Primare, Proscan, RCA, Rio, Samsung, Sansul, Sanyo, Sherwood, Sherwood New, Sonic Blue, Sony, Stereophonics, Sunfire, Teac, Technics, Thorens, Thule Audio, Toshiba, Venturer, Vizio, Wards, Yamaha, Zenith.

Table with columns for Manufacturer and Code. Includes Commercial Solutio, Crosley, CTX, Curtis, Cytron, Daewoo, Dell, Denon, Diamond Vision, Digital Lifestyles, Digital Projection, DirectTV, Disney, Dream Vision, Dumont, Durabrand, Dwin, Dymex, Electroband, Electrograph, Electrohome, Element, Emerson, Emprex, Envision, Epson, ESA, Fisher, Fujitsu, Funai, Gateway, GE, GFM, Gibraltar, Go Video, GoldStar, Grundig, Haier, Hallmark, Hanns-G, Hannspree, Harley Davidson, Harman/Kardon, Helios, Hello Kitty, Hewlett Packard, Hisense, Hitachi, HP, Humax, Hyundai, Ilo, Infinity, Infocus, Insignia, Inteq, IRIS, JBL, JCB, JCM, Jensen, JVC, KDS, Kenwood, KLH, KMD5, KTV, LG, Lloyd's, LXI, MAG, Magnasonic, Magnavox, Matsushita, Maxent, Megapower, Megatron, Memorex, MGA, Midland.

SETUP CODES FOR DIGITAL MEDIA

CODES DE RÉGLAGE POUR LECTEURS NUMÉRIQUES MULTIMÉDIA

Table with columns for Manufacturer and Code. Includes Minicore, Minivision, MTC, NAD, NEC, NetTV, Nexus Electronics, Nikko, Norcent, Norwood Micro, NuVision, Olevia, Optimus, Optoma, Orion, Panasonic, PARK, Patters, Philco, Philips, Pilot, Pioneer, Planar, Polaroid, Portland, Prima, Princeton, Prism, Projectiondesign, Proscan, Proton, Preview, Pulsar, Quasar, RadioShack, RCA, Realistic, RevolutionHD, Runco, Sampo, Samsung, Sansul, Sharp, Sherwood, Signature, Sole, Sony, Soundesign, Sova, Soyo, Spectoriniq, Squareview, Studio Experience, SunBrite, Superscan, Supreme, SVA, Sylvania, Symphonix, Syntax, Tatum, Technics, Techview, Techwood, Teco, Teknika, Telefunkon, Thomas, TMK, TNCI, Toshiba, TruTech, TVs, US Logic, Vector Research, Venturer, Victor, Vidikron, Viedtech, Viewsonic, Viore, Vistron, Vizio, Waycon, Westinghouse, White Westing, Wyse, Yamaha, Zenith.

Table with columns for Manufacturer and Code. Includes Albatron, Ampiro, AOC, Aorml, Apex Digital, Astar, Audiovox, Aventura, Axion, Bell & Howell, BenQ, Bowlight, Brooksion, Byd-sign, C & M, Candle, Carnivale, Carver, CCE, Celebrity, Celer, Changhong, Citizen, Coby, Commercial Solutio, Crosley, CTX, Curtis, Cytron, Daewoo, Dell, Denon, Diamond Vision, Digital Lifestyles, Digital Projection, DirectTV, Disney, Dream Vision, Dumont, Durabrand, Dwin, Dymex, Electroband, Electrograph, Electrohome, Element, Emerson, Emprex, Envision, Epson, ESA, Fisher, Fujitsu, Funai, Gateway, GE, GFM, Gibraltar, Go Video, GoldStar, Grundig, Haier, Hallmark, Hanns-G, Hannspree, Harley Davidson, Harman/Kardon, Helios, Hello Kitty, Hewlett Packard, Hisense, Hitachi, HP, Humax, Hyundai, Ilo, Infinity, Infocus, Insignia, Inteq, IRIS, JBL, JCB, JCM, Jensen, JVC, KDS, Kenwood, KLH, KMD5, KTV, LG, Lloyd's, LXI, MAG, Magnasonic, Magnavox, Matsushita, Maxent, Megapower, Megatron, Memorex, MGA, Midland.

Table with columns for Manufacturer and Code. Includes Altec Lansing, AMC, Amphion Media, AMW, Anam, Anthem, Apex Digital, Arcam, Audiotronic, Audiovox, B & K, Bose, Boston Acoustics, Cambridge Sound, Carver, Cary Audio Design, Coby, Curtis, Daewoo, Denon, Elan, Fisher, Flextronics, Gateway, Halcro, Harman/Kardon, Hitachi, iHome, iLive, Insignia, Integra, iSymphony, JBL, JVC, Kenwood, KLH, Koss, Krell, Left Coast, Levicon, LG, Linn, Liquid Video, Marantz, Magnavox, Mark Levinson, McIntosh, Micromega, Mitsubishi, Myrad, Nakamichi, NexTech, Norcent, Onkyo, Optimus, Ontron, Panasonic, Parasound, Philco, Philips, Pioneer, Polaroid, Polk Audio, Primare, Proscan, RCA, Rio, Samsung, Sansul, Sanyo, Sherwood, Sherwood New, Sonic Blue, Sony, Stereophonics, Sunfire, Teac, Technics, Thorens, Thule Audio, Toshiba, Venturer, Vizio, Wards, Yamaha, Zenith.

Table with columns for Manufacturer and Code. Includes Altec Lansing, AMC, Amphion Media, AMW, Anam, Anthem, Apex Digital, Arcam, Audiotronic, Audiovox, B & K, Bose, Boston Acoustics, Cambridge Sound, Carver, Cary Audio Design, Coby, Curtis, Daewoo, Denon, Elan, Fisher, Flextronics, Gateway, Halcro, Harman/Kardon, Hitachi, iHome, iLive, Insignia, Integra, iSymphony, JBL, JVC, Kenwood, KLH, Koss, Krell, Left Coast, Levicon, LG, Linn, Liquid Video, Marantz, Magnavox, Mark Levinson, McIntosh, Micromega, Mitsubishi, Myrad, Nakamichi, NexTech, Norcent, Onkyo, Optimus, Ontron, Panasonic, Parasound, Philco, Philips, Pioneer, Polaroid, Polk Audio, Primare, Proscan, RCA, Rio, Samsung, Sansul, Sanyo, Sherwood, Sherwood New, Sonic Blue, Sony, Stereophonics, Sunfire, Teac, Technics, Thorens, Thule Audio, Toshiba, Venturer, Vizio, Wards, Yamaha, Zenith.

SETUP CODES FOR DVD PLAYERS

CODES DE RÉGLAGE POUR LECTEURS DVD

Accurian	20675, 21416
Aiwa	20641
Akai	20695, 20770, 21089
Alco	20790
Allegro	20869
Amphion Media	20872
AMW	20872
Apex Digital	20672, 20755, 20794, 20796, 20797, 21004, 21020, 21056, 21061, 21100, 22619

Arrgo	21023
Aspire Digital	21168, 21407
Astar	21489
Audio Authority	22555
Audiovox	20790
B & K	20655, 20662
BBK	21224
Bel Canto Design	21571
Blue Parade	20571
Bose	21895
Broksonic	20695, 20868
California Audio	20490
Cinea	20831
CineVision	20876, 20833, 20869
Citizen	20695, 21277, 22116
Coby	20778, 21086, 21107, 21177, 21628
Craig	20831
Curtis Mathes	21087

CyberHome	20816, 20874, 21023, 21024, 21117, 21129, 21502, 21537
Daewoo	20784, 20705, 20833, 20869, 21169, 21172, 21234, 21242
Daytek	20872

Denon	20490, 20634, 21634, 22258
Desay	21407
DigitalMax	21738
Disney	20675, 21270
Dual	21068, 21085
Durabrand	21023, 21127
DVD2000	20521
Dynex	22255
Electrohome	22116
Emerson	20591, 20675, 20821, 21268
Enterprise	20591
ESA	20821, 21268
Fisher	20670
Funai	20675, 21268, 21334
Gateway	21073, 21077, 21158
GE	20522, 20815
GFM	20675, 21268
Go Video	20744, 20715, 20741, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304, 21730

GoldStar	20741, 20869
Gradiente	20651
Grundig	20539, 20705
Harman/Kardon	20582, 20702, 21229
Helios	22080, 22192
Hello Kitty	20831
Hitachi	20573, 20664
Hiteker	20672
Humax	21500, 21588
iLo	21348

Insignia	20675, 21268, 22095, 22255, 22428, 22596
Integra	20571, 20627, 21634, 21769, 22147
Irradio	20646
JBL	20702
JVC	20558, 20623, 20867, 21164, 21275, 21550, 21602, 22365, 22472

Kawasaki	20790
Kenwood	20490, 20534
KLH	20790, 21020, 21149
Koss	20651
Lasonic	20798
Lennox	21127
LG	20591, 20741, 20869, 21602, 22135
LiteOn	21058, 21158, 21416, 21440, 21656, 21738
Lowe	20511
Logitech	22639
Magnavox	20503, 20539, 20646, 20675, 20821, 21177, 21268, 21354, 21506, 22229
Marantz	20539, 22414
McIntosh	21533, 21273
Memorex	20695, 20831, 21270, 22213
Microsoft	20522, 22083
Mintek	20839
Mitsubishi	21521, 20521
NAD	20741, 22572
NEC	20785
NextTech	21402
Norcent	21003, 20872, 21107, 21265
Nyko	22340
Olevia	22331
Onkyo	20503, 20627, 21612, 21769, 22147, 22215

Oppo	20575, 21224, 22185, 22545
Oritron	20651
Panasonic	20490, 20503, 20632, 20703, 21579, 21641, 21762
Philco	20675
Philips	20503, 20539, 22056, 20646, 20675, 20854, 21158, 21260, 21267, 21340, 21354, 21506, 22084, 22434
PianoDisc	21024
Pioneer	20525, 20571, 20142, 20631, 20632, 21460, 21512, 21571, 22442
Polaroid	21020, 21061, 21086
Polk Audio	20539
Portland	20770
Presidian	20675, 21738
Proced	20672
Proscan	20522
Provision	20778
Qwestar	20651
RCA	20522, 20571, 20790, 20822, 21022, 21132, 21769, 22213, 22392
RE-BL	22555
Rio	20869
Rotel	20623, 21178
Rowa	20823
Sampo	20698, 20752
Samsung	20490, 20573, 20199, 20820, 21044, 21075, 21470, 22069, 22329, 22369, 22489, 22556
Sansui	20695
Sanyo	20670, 20695, 20873
Schneider	20646
Sensory Science	21158
Sharp	20630, 20675, 20752, 21256, 22530, 22561
Sharper Image	21117

Sherwood	20770, 21043, 21077
Sherwood New	21077
Shinonic	20533, 20839
Sonic Blue	20869, 21099
Sony	20533, 21533, 20864, 20772, 21033, 21070, 21431, 21516, 21536, 21633
Superscan	20821
Sylvania	20675, 20821, 21268, 22194
Symphonic	20675, 20821
Teac	20790
Technics	20490, 20703
Terapin	21031
Theta Digital	20571
Tivo	21503, 21512
Toshiba	20503, 20695, 21154, 21503, 21510, 21588, 21608, 21769,22006, 22277, 22765
Urban Concepts	20503
US Logic	20839
Venturer	20790
Viore	22553
Vizio	21064, 21226, 22563
WB Electronics	22555
Xbox	20522, 22083
Yamaha	20490, 20539, 20646, 20545, 20497, 20817, 21416, 22298, 22558
YBA	20872
Zektor	21730
Zenith	20503, 20591, 20741, 20869
Zoeco	21265

SETUP CODES FOR BLU-RAY DVD PLAYERS

CODES DE RÉGLAGE POUR

LECTEURS DVD BLUE-RAY

Denon	22258
Insignia	20675, 22428, 22596
Integra	21769, 22147
JVC	22365
LG	20741, 21602
Magnavox	20675
Marantz	22414
Microsoft	22083
NAD	22572
Olevia	22331
Onkyo	21612, 21769, 22147
Oppo	22545
Panasonic	21641
Philips	22084, 22434
Pioneer	20142, 22442
RCA	21769
Samsung	20199
Sharp	22250, 22561
Sony	21516
Sylvania	20675, 22194
Toshiba	21769, 22705
Viore	22553
Vizio	22563
Xbox	22083
Yamaha	22298

SETUP CODES FOR VCR

CODES DE RÉGLAGE POUR

MAGNÉTOSCOPES

ABS	21972
Accurian	20000
Admiral	20048, 20209, 20479
Adventura	20000
Aiwa	20037, 20000
Alienware	21972
Allegro	20039, 21137
American High	20035
Audiovox	20037
Bell ExpressVu	21944
Bright House	22763
Broksonic	20184, 20121, 20209, 20479, 21479
Cable One	22763
Cablevision	22763
Calix	20037
Canon	20035
Carver	20081
Charter	22763
CineVision	21137
Citizen	20037, 21278
Comcast	22448, 22763
Cox	22763
Craig	20037
Crosley	20081, 20000
CyberPower	21972
Daewoo	20045, 21137, 21278
Dell	21972
Denon	20042
DirectTV	20739, 22033
Dish Network	21944
Dishpro	21944
Durabrand	20039, 20038
Dynatech	20000
Echostar	21944
Electrohme	20037, 20043
Electroronic	20037
Emerex	20032
Emerson	20037, 20184, 20000, 20121, 20043, 20209, 20479, 2059, 21278, 21479, 21593
ESA	21137
Expressvu	21944
Fuji	20035, 20033
Funai	20000, 20593, 21593
Garrard	20000
Gateway	21972
GE	20060, 20035, 20807, 21035, 21060
GFM	21593
Go Video	20614, 21137
GOI	21944
GoldStar	20037, 20038, 21137, 21237
Gradiente	20000
Harley Davidson	20000
Harman/Kardon	20081, 20038
Headquarter	20046
Hewlett Packard	21972
Hitachi	20000, 20042, 20089, 20593
Howard Computers	21972
HP	21972
HTS	21944
Hughes Network	20042
Humax	20739
Hush	21972
iBUYPOWER	21972
Insight	22763

Instant Replay	20035
JVC	20067, 21944
KEC	20037
Kenwood	20067, 20038
Kodak	20035, 20037
LG	21037, 21137
Linksys	21972
Lloyd's	20000
LXI	20037
Magnasonic	20593, 21278
Magnavox	20035, 20039, 20081, 20000, 20149, 20563, 20593, 21593,21781
Marantz	20035, 200571
Marta	20037
Matsushita	20035, 20162, 21162
Media Center PC	21972
Mediacom	22763
MEI	20035
Memorex	20035, 20162, 20037, 20048, 20039, 20000, 20209, 20046, 20479, 21037, 21162, 21237, 21262

MGA	20043
Microsoft	21972
Mind	21972
Minolta	20042
Mitsubishi	20067, 20043, 20807
Motorola	20035, 20048, 22763
MTC	20000
Multitech	20000
NEC	20067, 20038
Niko	20037
Niveus Media	21972
Northgate	21972
Olympus	20035
Orion	20184, 20209, 20479, 21479
Pace	22763

Panasonic	21062, 20035, 20162, 20225, 20614, 20616, 21035, 21162,21262
Pentax	20042
Philco	20035
Philips	20739, 20035, 20081, 20618, 21081, 21181
Pilot	20037
Pioneer	20067
Polk Audio	20081
Presidian	21593
Proscan	20060, 21060
Pulsar	20039
Quarter	20046
Quartz	20046
Quasar	20035, 20162, 21035, 21162
RadioShack	20000, 21037
Radix	20037
Randex	20037
RCA	20060, 20035, 20042, 20149, 20807, 20880, 21035, 21060

Realistic	20035, 20037, 20048, 20000, 20046
ReplayTV	20614, 20616
Ricavision	21972
Rio	21137
Runco	20039
Samsung	20045, 21014
Sanky	20048, 20039
Sansui	20000, 20067, 20209, 20479, 21479
Sanyo	20046
Scott	20184, 20045, 20121, 20043, 20210
Sears	20035, 20037, 20000, 20042, 20046, 21237
Sharp	20048, 20807, 20848
Signature	20035
Sonic Blue	20614, 20616, 21137
Sony	21232, 20032, 20035, 20033, 20000, 20636, 21032, 21972

Stack 9	21972
STS	20042
Suddenlink	22763
Sylvania	20035, 20081, 20000, 20043, 20593, 21593, 21781
Symphonic	20000, 20593, 21593
Systemax	21972
Tagar Systems	21972
Tashiko	20037
Teac	20000
Technics	20035, 20162
Teknika	20035, 20037, 20000
Thomas	20000
Time Warner	22763

Tivo	20739, 20618, 20636, 21996, 22448
Toshiba	20045, 20043, 20209, 20210, 20845, 21008, 21145, 21972, 21996
Tovision	20037
Touch	21972
Vector	20045
Vector Research	20038
Video Concepts	20045
Videomagic	20037
Viewsonic	21972
Villain	20000
Voodoo	21972
White West.	20209
XR-1000	20035, 20000
Yamaha	20038
Zenith	20037, 20039, 20033, 20000, 20209, 20479, 21137, 21479
ZT Group	21972

ADRESSE SAT	CODE
ADRESSE 0	000
ADRESSE 1	001
ADRESSE 2	002
ADRESSE 3	003
ADRESSE 4	004
ADRESSE 5	005
ADRESSE 6	006
ADRESSE 7	007

Adresser	
1	000
2	001
3	002
4	003
5	004
6	005
7	006

APERÇU
Les télécommandes Shaw Direct IRC600 IR et URC600 IR/RF fabriquées par Universal Electronics sont nos télécommandes universelles de la toute dernière génération. Leur technologie sophistiquée vous permet de regrouper les fonctions de trois de vos télécommandes d'appareils de divertissement maison en un seul produit facile à utiliser.

La télécommande requiert l'installation de deux (2) piles AA neuves (comprises) et une programmation simple afin de faire fonctionner votre téléviseur. Pour obtenir les meilleurs résultats, veuillez lire et exécuter toutes les instructions décrites ici.
Conservez ce guide pour référence ultérieure.

INSTALLATION DES PILES

- Soulevez le couvercle du compartiment